




Restoring a Broken WiFi Connection

Chromebook Edition

01 | Locate & Select Network


of 2

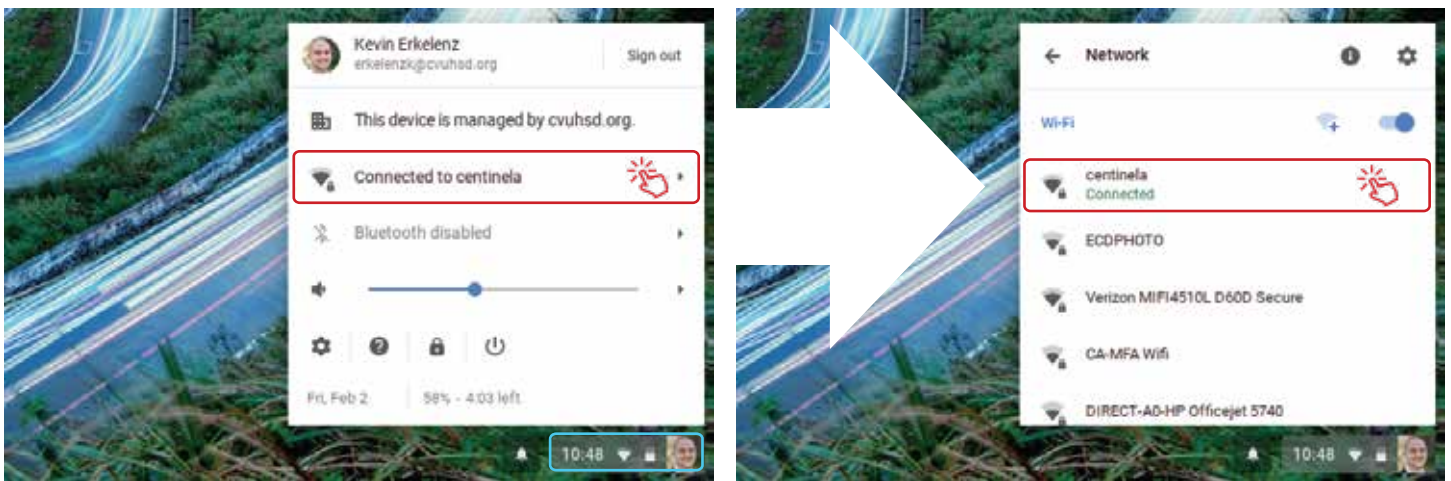

Click on the small panel in the bottom right ↑ corner in order to open the control center shown above.

02 | Forget Network & Reconnect

of 2

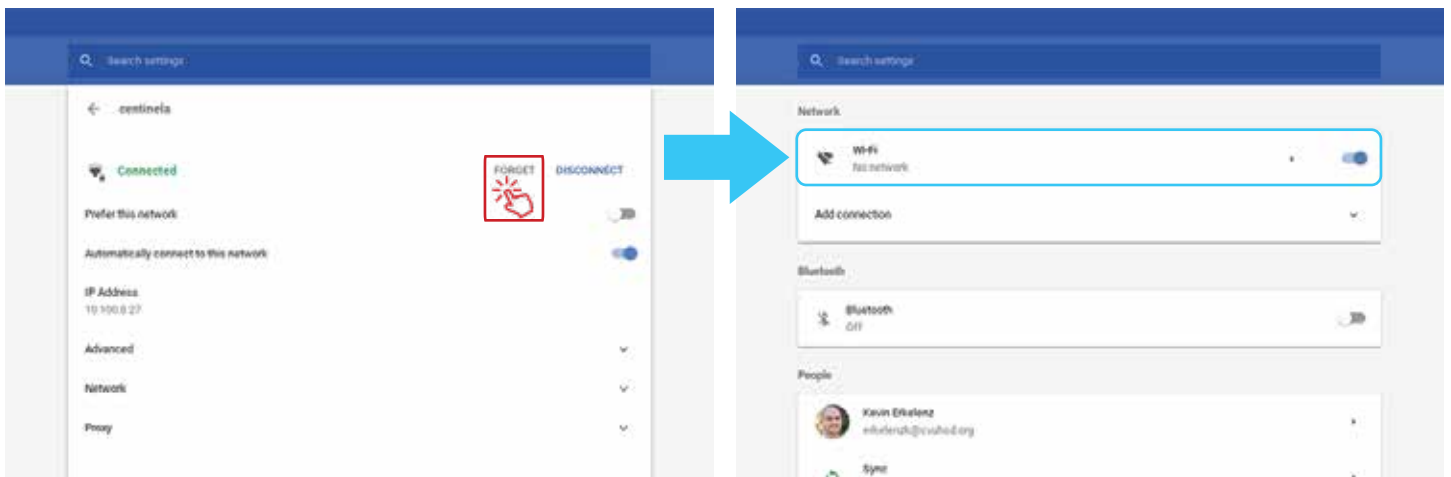

Once you have followed all the steps to forget the network, please refer to the "Connecting to Centinela WiFi" tutorial page in order to reconnect.